

Intrinsically Safe
Personal Radiation Monitor



**User's Guide** 

P/N 047-4204-000 Revision A, January 2006

# **Read Before Operating**

This manual must be carefully read by all individuals who have or will have the responsibility of using, maintaining, or servicing this product. The product will perform as designed only if it is used, maintained, and serviced in accordance with the manufacturer's instructions.



## **↑** CAUTION!

To reduce the risk of electric shock, turn off power and remove batteries before removing the monitor cover. Never operate this monitor while the cover is removed. Remove monitor cover and sensor modules only in an area known to be non-hazardous.



#### WARNING

To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.



#### WARNING

Do not mix old batteries with used batteries or mix batteries from different manufacturers.



#### WARNING

Substitution of components may impair intrinsic safety.



For safety reasons, this equipment must be operated and serviced by qualified personnel only. Read and understand the user manual completely before operating or servicing.



#### **Computer Interface**

Do not transfer data by means of the Bluetooth® interface in hazardous atmospheres.



#### Static Hazard

Clean only with a damp cloth.



## ♠ Long-Term Storage

Reliable performance of this radiation detector is based upon regular usage. For long-term storage, the battery should be disconnected. Preparation for use after long storage requires installation of the batteries and a warm-up period of at least 10 minutes for the sensors to equilibrate. The user should recognize that sensor life is based upon the purchase date.



Pour des raisons de sécurité, cet équipement doit être utilisé, entretenu et réparé uniquement par un personnel qualifié. Étudier le manuel d'instructions en entier avant d'utiliser, d'entretenir ou de réparer l'équipement.



#### Câble de Computer

Ne transférez pas les données au moyen de l'interface de bluetooth en atmosphères dangereuses.



## Danger Risque D'origine Electrostatique

Nettoyer uniquement avec un chiffon humide.



## Stockage à Long Term

Le fonctionnement durable de ce détecteur de rayonnement est conditionné par une utilisation régulière de celui ci. Lors d'un stockage à long terme, la batterie doit être déconnectée. Le rédémarrage aprés une longue période d'arrêt, nécessite la réinstallation de la batterie, et une période de chauffage de 10 mn afin que les capteurs se mettent à l'équilibre. L'utilisateur doit être conscient que la durée de vie indiquée pour le capteur démarre à sa date d'achat.

## 

General Information	. 5
Inserting & Replacing Batteries	6
User Interface	
User Interface Icons	. 8
Turning the NeutronRAE II On and Off	. 8
Flipping the Screen	
Operation	
Normal Operating Mode	13
NORM	
CAL	14
PEAK	15
MIN	15
DOSE	16
STAT	16
COMM	17
TEST	18
Programming Mode	20
Alarm Set	21
Datalog Set	22
Monitor Set	23
Back Lite	24
Buzz & Lite	25
Vibrate mode	25
Temp Unit	25
Gamma Unit	
Change Date	26
Change Time	26
Quit	27
Default Settings and Parameter Ranges	27
Specifications	
Limited Warranty	32

## NeutronRAE II Features



Rear/Side View

## **General Information**

The NeutronRAE II an intrinsically safe rapid detector of  $\gamma$ -ray (gamma) and neutron radiation sources. Because of its high sensitivity, it can alert first responders to the presence of a radiation threat well before they might be exposed to health-threatening levels. It is the only personal radiation detector with a loud audible alarm, big, bright flashing



LEDs, and a vibration alarm. For stealth operations, law enforcement personnel can disable each alarm separately.

NeutronRAE II's water-resistant design makes for reliable operation in wet environments. Its sensitive Cesium Iodide (CsI) and Lithium Iodide (LiI) scintillators provide fast (less than 2 seconds for gamma/5 seconds for neutron) response to radiological threats.

The NeutronRAE II accumulates approximate dosage. Stored dosage data can be cumulative or cleared and reset for each use period.

# **Inserting & Replacing Batteries**


NeutronRAE II uses two AA alkaline batteries as its power source (use only Duracell MN1500 or Energizer E91). To change the batteries:

- 1. Use a coin or screwdriver to open the cover on the side of the unit. Turn the screw counterclockwise to loosen the screw, and then tilt the cover off.
- 2. Insert batteries into the compartment according to the legend on the rear of the NeutronRAE II, making sure the batteries' polarity is correct.
- 3. Replace the cover and turn the screw clockwise to secure the cover.

**Note:** When you touch the cover's internal contacts to the batteries, NeutronRAE II's alarm sounds briefly, indicating that the batteries are not dead. If the sound is distorted or irregular, the batteries should be replaced.

## **User Interface**

NeutronRAE II's user interface consists of the display, LEDs, alarm transducer and two buttons, labeled MODE and SET. The LCD display provides visual feedback that includes time, functional mode, battery condition, and gamma radiation measurement.

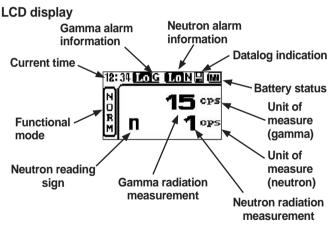

#### **MODE and SET switches**



# **User Interface Icons**

 
Icon	Indication
	Battery Voltage low
	Battery Low alarm triggered
(M)	Battery fully charged
LoG	Low Gamma alarm triggered
G	High Gamma alarm triggered
ORG	Gamma Over-Range (reading over 4000 μR/h)
<b>∭</b> G	Gamma Overload (reading more than two times Over-Range)
LON	Low Neutron alarm triggered
ORN	Neutron Over-Range (reading over 100 cps)
N	Neutron Overload
<b>*</b> 3	Bluetooth® communication active
	Datalogging active (flashing)

## Turning NeutronRAE II On and Off

## **Turning NeutronRAE II On**


Press and hold the MODE button for 3 seconds. As NeutronRAE II starts up, the following occur:

 A long beep sounds (if the buzzer is set to On), and unit information and the current firmware version are displayed. The LEDs and vibrator undergo a self-test.




**Important!** If your NeutronRAE II displays "Gamma sensor failed," "Neutron sensor failed," or "All sensors failed!" contact your distributor or RAE Systems service at 408-952-8200. Do not attempt to use or repair the unit. There are no user-serviceable parts in the NeutronRAE II.

 
2. Unit self-check. The time and battery status are displayed:



 During the 20-second self-check, the detector checks that the gamma and neutron sensors are functioning properly. If so, the messages "Gamma sensor OK!" and "Neutron sensor OK!" are displayed.




If the sensor is damaged or not functioning properly, the message "Gamma sensor failed" or "All sensors failed" is displayed, turn the unit off and contact your distributor or the RAE Systems service department.

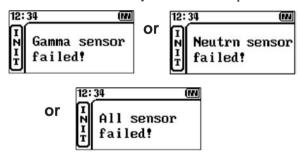


3. The datalog type is displayed, followed by the gamma alarm mode. These parameters can be changed in


Programming Mode, described later in this guide.

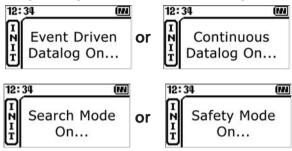

  Gamma background calibration reading (only if the NeutronRAE II is in Search Mode). The NeutronRAE II performs a 36-second background reading countdown.




 When background calibration reading is complete, datalogging starts (if Continuous Datalogging is enabled) and the unit is in Normal Operating Mode. The display looks like this:



## **Turning NeutronRAE II Off**

Press the MODE button and hold for 5 seconds. The detector counts down 5 seconds and then turns itself off. Do not release the MODE button until the unit counts down to zero and the display reads "Save config..." and "Stop unit..."

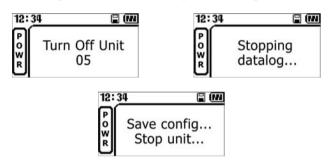

# Flipping the Screen

The NeutronRAE II is easy to read, whether held in the hand or clipped to a belt. To flip the screen, press the SET button and hold it down for 3 seconds. When the image inverts, release the button.



To flip the display again, press and hold SET for 3 seconds.

# Operation

TEST

The NeutronRAE II has two modes: Normal Operating Mode and Programming Mode. Normal Operating Mode is the default; see Programming Mode, on page 20, for details on entering and using Programming Mode.

# **Normal Operating Mode**

In Normal Operating Mode, the NeutronRAE II detects gamma and neutron radiation and accumulates gamma radiation dosage data. In Normal Operating Mode, pressing the MODE button sequentially steps the unit through the following functions:

NORM Normal Operating Mode CAL Background calibration (only in Search Mode) PEAK Maximum radiation levels detected since last cleared MIN Minimum radiation levels detected since last cleared DOSE Accumulated gamma radiation dosage since last cleared TIME Time, date, and time unit has been on STAT Detector status (battery voltage and internal temp.) COMM Open BlueTooth communication with computer

Self test (if Diagnostic Flag is set during start-up)

 
Each function remains active for 60 seconds before automatically returning to the Normal Operating Mode. Pressing the MODE button changes the selection from one function to the next one in the sequence.

#### **NORM**

Normal Operating Mode of the NeutronRAE II.

Displays a measurement of the ambient gamma and neutron radiation. It can display gamma in counts per second (cps) or  $\mu R/h$  or  $\mu Sv/h$ , depending on how the detector is set up (see Programming Mode) and neutron in counts per second. Switch back and forth between gamma units by pressing the SET button.






Press the MODE button to step to the next function.

#### CAL

 Background calibration. This option is only active if the NeutronRAE II in Search Mode. This option is skipped if the detector is in Safety Mode.

Press the SET button to have the detector update the background radiation reading.





Press the MODE button to step to the next function.

#### **PEAK**

  The maximum radiation levels detected since last cleared.

Press the SET button twice to clear the PEAK values. If you press SET once but do not want to clear the readings, press MODE to return to the PEAK readings. The PEAK values are also cleared when the detector is turned off.






Press the MODE button to step to the next function.

#### MIN

 The minimum radiation levels detected since last cleared.

Press the SET button twice to clear the MIN values. If you press SET once but do not want to clear the readings, press MODE to return to the MIN readings. The MIN values are also cleared when the detector is turned off.







Press the MODE button to step to the next function.

#### **DOSE**

  The accumulated gamma radiation dosage since last cleared

Press the SET button twice to clear the DOSE value. If you press SET once but do not want to clear the DOSE reading, press MODE to return to the DOSE reading.






Press the MODE button to step to the next function.

#### TIME

 Time, date, and run time. Date is displayed in YYYY-MM-DD format (can be set in Programming Mode). Time is displayed in HH:MM:SS format (can be set in Programming Mode).

On Run time from when the detector was turned on (shown in hours and minutes, 0000:00)




Press the MODE button to step to the next function.


#### **STAT**

 Detector status.

**BattV** Battery voltage **Temp** Internal temperature (can be displayed in °C or °F – see Programming Mode)



 If the internal temperature exceeds the maximum operating temperature, the unit will alarm and display:



Cool the unit down to resume normal operation.

Press the MODE button to step to the next function.


#### COMM

 Communicate with a computer using Bluetooth<sup>®</sup> radio. Press SET to open the connection on the NeutronRAE II unit end. Use the ProRAE Studio Radiation Software on your computer to download datalogs.


#### **TEST**

Self test. This consists of tests to make sure all alert functions are working properly. This function is only enabled if the Diagnostic Flag was set at start-up. To set the Diagnostic Flag, press and hold SET and MODE simultaneously when turning the unit on, instead of pressing MODE only.


Press the SET button to accept and to initiate testing.



 
The Buzzer is tested. Press the SET button to start the next test.



 
The Vibrator is tested. Press the SET button to start the next test.



 
The LEDs are tested. Press the SET button to start the next test.



 The back light is tested. Press the SET button to start the next test.




The Bluetooth® radio is tested.

 

Press the SET button to start the next test.

 The Buzzer in Alarm is tested.




Press the SET button to finish the TEST functions. This returns NeutronRAE II to Normal Operating Mode. During any test, if the SET button is not pressed within 60 seconds, the unit will automatically move on to the next test.

## **Programming Mode**

 Programming Mode is used to change alarm settings and detector settings (units of measure, time, etc.).

**Note:** Changes to some parameters cause the detector to automatically restart or recalibrate.

From Normal Operating Mode, simultaneously press the MODE button and SET button, and hold them down for 3 seconds. NeutronRAE II enters the Programming Mode and displays the Main Menu:



Press the MODE button to step through the menu of parameters.

Press the SET button to select a parameter.

#### Alarm Set

Select Alarm Set to set the alarm mode or type and the detection limits for the alarm:

Parameter	Used In	
Alarm Type Select Search or Safety I		
Gamma CF	Search Mode	
Gamma Hi	Safety Mode	
Gamma Low Safety Mode		
Neutron CF Search/Safety Mode		
Quit		

 
The Gamma/Neutron CF (Correction Factor) is used to set the Search Mode alarms at a calculated percentage above background. The alarms are set according to:

Search Mode Alarm = 
$$CF*\sigma_{bk}$$

where  $\sigma_{bk}$  is the standard deviation of the stored background reading.

**Note:** The default valuees are 005.8 for both the Gamma CF and the Neutron CF. In Safety Mode, there are two absolute Gamma alarms: Gamma Low and Gamma Hi. These are set in cps, where 1 cps is equal to  $1\mu R/h$ , or  $0.01\mu Sv/h$ . The Neutron alarm remains in Search Mode at all times.

Press the MODE button to step through the digits from left to right. Use the SET button to increment each digit (from 0 through 9).



Select Save to save changes or Quit to discard changes.

To exit Alarm Set, step through the options using the MODE button until you see Quit. Press the SET button to exit Alarm Set, and then step through the Main Menu until you see Quit. Press SET to exit Program mode and return to Normal Operating Mode.

## **Datalog Set**

Select Datalog Set to change any of the following datalog parameters:

Clear Data	Datalog Period
Datalog Type	Ouit

**Clear Data:** Press the SET button to clear the datalog. Press the MODE button to return to the Datalog Set Menu.

**Datalog Period:** Set the time interval between datalog points. You may set any time interval between 1 and 3600 seconds. Press the MODE button to step through the digits from left to right. Use the SET button to increment each digit (from 0 to 9).



Select Save to save changes or Quit to discard changes.

**Datalog Type:** Set the type of datalogging. Choices are Continuous or Event-driven. Choose Continuous to log data at a set interval at all times (except when the unit is Programming Mode). Choose Event-driven to log data only when the dose rate readings increase or the unit goes into alarm.

**Quit:** To exit Datalog Set, step through the options using the MODE button until Quit is selected. Then press the SET button.

#### **Monitor Set**

Select Monitor Set to change any of the following parameters:

Back Lite Buzz & Lite Vibrate Mode Temp Unit Gamma Unit Change Date Change Time Quit

Press the MODE button to step through these options.

Select an option using the SET button. Once you have selected a menu option, step through the options using the MODE button, and select using the SET button.

#### **Back Lite**

Set the behavior of the display backlight. Choices are Automatic (a photosensor turns on the light in dark locations), Manual (light stays on for 15 seconds when you tap SET in Normal Operating Mode), or Off.

#### **Buzz & Lite**

Set the behavior of the audible and visible alarms. Choices are Both on (LEDs and audible alarm), Light only (LEDs only), or Both off.

**Note:** You cannot turn off all of the alarm alerts at the same time. If you select Both Off when the Vibration alarm is Off, "Invalid Setting" is displayed and the previous Buzz & Lite setting is restored.

 
#### Vibrate Mode

Set the vibration alarm. Choices are On or Off.

**Note:** You cannot turn off all of the alarm alerts at the same time. If you select Both Off when the Buzz & Lite is set to Both Off, "Invalid Setting" will be displayed and the previous Vibrate setting will be restored.

## **Temp Unit**

Set the unit of measure. Choices are Fahrenheit and Celsius. Press MODE to select Fahrenheit or Celsius. Then press SET to save your choice and exit.




#### Gamma Unit

Set the unit of measure (of gamma radiation). Choices are  $\mu$ R/h or  $\mu$ Sv/h. Press MODE to select your choice, and then SET to save your choice and exit.

## **Change Date**

 Set the date (mm/dd/yyyy). Press MODE to step through month, date, and year, and press SET to increment through the digits (holding the SET button continuously speeds through the numbers).



Press MODE to select Save, and press SET to save your date changes. Otherwise, press MODE again to select Quit and press SET to exit.

## **Change Time**

Set the time (hh/mm/ss). Press MODE to step through hours, minutes, and seconds, and press SET to increment through the digits (holding the SET



button continuously speeds through the numbers). **Note:** The clock operates in 24-hour mode only.

Press MODE to select Save, and press SET to save your time changes. Otherwise, press MODE again and select Quit. Press SET to exit.

#### Quit

To exit Monitor Set, step through the options of Monitor Set until you see Quit. Press the SET button to exit Monitor Set. Then step through Main Menu selections using the MODE button until you see Quit. Press SET to exit Program Mode and return to Normal Operating Mode.

# NeutronRAE II Default Settings & Parameter Ranges

Main Menu	Sub Menu	Default Settings	Data Range
Alarm Set	Alarm Type	Search	Search/Safety
	Gamma CF*	5.8	1.0-9.9
	Gamma Hi	200 cps	0-4000 cps
	Gamma Low	50 cps	0-4000 cps
	Neutron CF*	5.8	1.0-9.9
Datalog Set	Clear Data	N/A	N/A
	Change Type	Continuous	Continuous or Event-driven
	Log Interval	60 sec	1-3600 sec

<sup>\*</sup> Correction Factor

	Back Lite	Manual	Automatic Manual
	Dack Lite	Wianuan	Off
	Buzz & Lite	Both On	Both On
			Light Only
			Both Off
Monitor Set	Vibrate	On	On
			Off
	Temp Unit	Celsius	Fahrenheit
			Celsius
	Gamma Unit	μR/h	μR/h
			μSv/h
	Change Date		MM/DD/ YYYY
	Change Time		HH/MM/SS

# **NeutronRAE II Specifications**\*

	,
Size	4.92" x 2.68" x 1.38" (125 x 68 x 35 mm)
Weight	9 oz. (240g)
Detectors	Gamma: 3cc CsI(Tl)/Photodiode Neutron: 1cc LiI(Eu)/Photodiode
Battery	2 AA alkaline batteries easily accessible with a coin
Operating Period	Up to 600 hours
Display	Graphic LCD display with 1.2" x 0.75" (30.5 mm x 19 mm) viewable area can be flipped for view by wearer or by others
Key Pad	2 operation/program buttons
Direct Readout	Gamma dose rate (cps, µR/h, µSv/h) Neutron radiation intensity (cps) Gamma/Neutron peak Gamma/Neutron minimum Gamma dose Battery status Current time and date Current time since startup Internal temperature

<sup>\*</sup>Specifications are subject to change.

Rocklight	Automatic manual or off
Backlight	Automatic, manual, or off
Calibration	Periodic functional test recommended using a <sup>137</sup> Cs check source. Factory calibration recommended every two years
Alarm Setting	Programmable alarm sensitivity with background compensation to minimize false alarms, absolute safety alarms for gamma
Alarm Modes	Search Mode: Alarm thresholds set at a percentage above background reference reading Safety Mode: User-set high and low absolute alarm levels (gamma only)
Alarm Alerts	Loud 85dB @ 12" (30 cm) for noisy environments
	Built-in vibration alarm
	Highly visible LED lights on both sides of LCD graphic display
Datalog	30,000 datapoints (20 days @ 60-sec. intervals), wraparound log

# Specifications (continued)

<b>Datalog Modes</b>	Continuous: Logs data continuously Event Driven: Begins logging on alarm	
Log Interval	User-programmable (1 to 3600 sec.)	
Communica- tions	Built-in Bluetooth® radio	
Ergonomics	Nonslip rubber housing with grippable ridges securely fits hand or glove	
Energy Range	Gamma: 0.06 to 3.0 MeV Neutron: thermal to 14 MeV	
Sensitivity	Gamma: More than 1 cps per μR/hr (>100 cps per μSv/hr)  Neutron: 1 to 2 cps per 2.5 neutrons/ second/cm <sup>2</sup>	
Dose Equivalent Rate (DER) range for <sup>137</sup> Cs	<b>Gamma:</b> 1 to 4000 μR/h (0.01 to 40 μSv/h) <b>Neutron:</b> 1 to 100 cps	
Accuracy of DER for <sup>137</sup> Cs	±20%	
Dosage Range	1 μR to 999 R (gamma only)	

Temperature	-20° C to 50° C (-4° F to 122° F)	
Humidity	0% to 95% (non-condensing)	
Shock Resistance	Passes drop test from 1.5m (59")	
IP Rating	IP67	
Attachments	Rugged metal belt clip and wrist strap	
Certification	Intrinsically safe: CSA Class I, Division 1, Groups A, B, C, D, T4 US/Canada	

# **Limited Warranty**

RAE Systems Inc. warrants NeutronRAE II to be free from defects in materials and workmanship for a period of 1 year. This warranty is expressly limited to the original owner who purchases the equipment directly from RAE Systems or from an authorized RAE Systems reseller. To validate this warranty the original Warranty & Registration Card supplied with the product must be completed and returned to RAE Systems, or the product registered online via the RAE Systems, Inc. online registration system, within 30 days of purchase.

To maintain this limited warranty, the product must be operated, calibrated and maintained in accordance with the Operation and Maintenance Manual supplied with the product. Abuse, mechanical damage, alteration, and/or repair procedures not made in accordance with the Operation and Maintenance Manual voids the RAE Systems Standard Limited Warranty.

The obligation of RAE Systems under this limited warranty is limited to the repair or replacement of components deemed by the RAE Systems Instrument Service Department to have been defective under the scope of this Standard Limited Warranty. To receive consideration for warranty repair or replacement procedures, products must be returned to RAE Systems at its manufacturing location in San Jose, California, USA, with transportation and shipping charges prepaid. It is

necessary to obtain a return authorization number from RAE Systems prior to shipment.

This limited warranty is expressly in lieu of any and all representations, express or implied, including but not limited to, the warranty of fitness for a particular purpose. RAE Systems will not be liable for loss or damage of any kind connected to the use of its products or failure of its products to function or operate properly.



Thank you for reading this data sheet.

For pricing or for further information, please contact us at our UK Office, using the details below.

UK Office Keison Products,

P.O. Box 2124, Chelmsford, Essex, CM1 3UP, England.

Tel: +44 (0)330 088 0560

Fax: +44 (0)1245 808399

Email: sales@keison.co.uk

Please note - Product designs and specifications are subject to change without notice. The user is responsible for determining the suitability of this product.