

## OPERATION


For 'Watcher' operation, refer to tablet mapping on opposite side of this document.

- 1) Switch ON 'Watcher' tablet.
- 2) Switch ON Instrument.

Note: Instrument will not begin warm-up until connected to 'Watcher' tablet.

- 3) Open GMI 'Watcher' App 
- 4) Select instrument serial number on 'Watcher' tablet pop-up window,

as shown:






- 5) Instrument warms-up. During this time, you can select 'Cal-Due' or 'Zero Fault' warning messages on the 'Watcher' tablet to send to the instrument.
- 6) 'Watcher' tablet is now ready for training.

## BLUETOOTH (information)

The 'Watcher' tablet may already be pre-paired to the target instrument.

To change, or add another instrument during start-up, do the following:

- 1) Select  > Settings > Bluetooth >
- 2) Select instrument serial number, e.g. GMI XXXXXX or, Find devices nearby.
- 3) Use pairing password '0'
- 4) Open GMI 'Watcher' App 
- 5) Select new instrument from list.

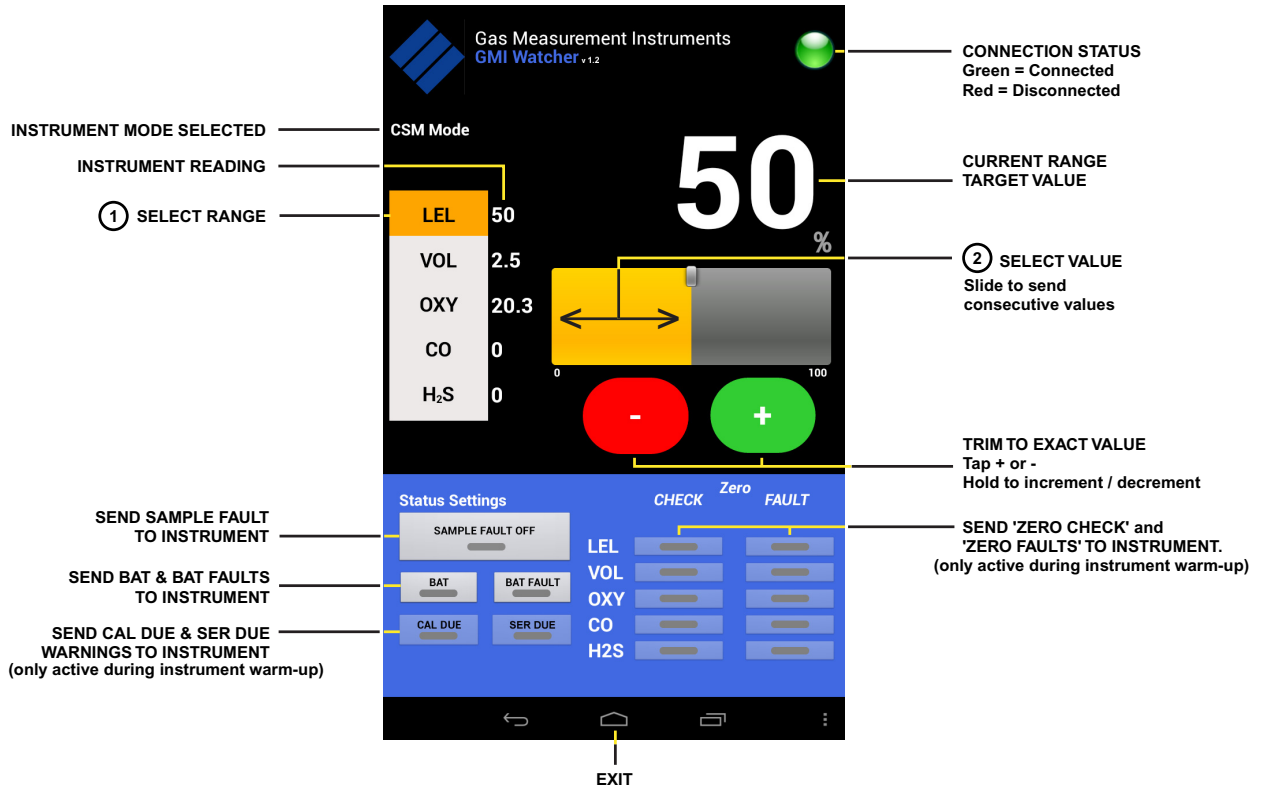



Thank you for reading this data sheet.

For pricing or for further information, please contact us at our UK Office, using the details below.



**UK Office**

**Keison Products,**

**P.O. Box 2124, Chelmsford, Essex, CM1 3UP, England.**

**Tel: +44 (0)330 088 0560**

**Fax: +44 (0)1245 808399**

**Email: [sales@keison.co.uk](mailto:sales@keison.co.uk)**

Please note - Product designs and specifications are subject to change without notice. The user is responsible for determining the suitability of this product.